

**Tools Required**


- 1- 13-MM wrench
- 1- 13-MM socket
- 1- 9/16" wrench
- 1- 9/16" socket
- 2- 3/8" wrenches
- 1- Ratchet wrench
- 1- 1/8" Allen wrench
- Marker
- Electric Drill
- 3/8" drill bit

**Parts**

- T-handle
- Outside housing
- Top bracket with seat plunger receiver
- Seat plunger
- Bottom brace

**Package of fasteners - Includes -**

- 1 - SS threaded studs
- 2 - SS Black cap nuts
- 2 - 1-1/4" x 3/8" SS bolts
- 2 - 3/8" SS washers
- 2 - 3/8" SS lock nuts
- 1 - Foam Gasket

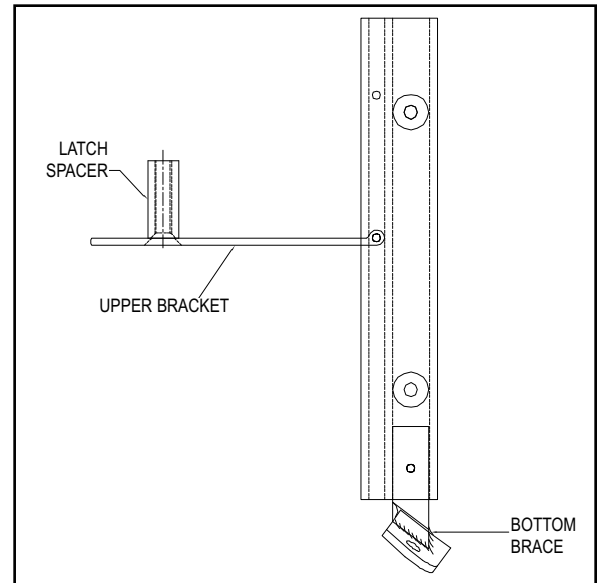

**Preparation & Installation**

1. Remove seat. (On the 2003 and some of the 2004 models you will also need to remove the factory seat plunger)
2. Remove rear grab handle by removing the 8mm bolts, washers and nuts. This will also remove the factory ski-eye and the seat plunger on the 2004 model.
3. Install ski-pylon bracket in place of factory ski-eye. Do not adjust plunger height. Reinstall rear grab bar with the same hardware.
4. Slide outside housing on to upper pylon bracket, from top down. Line up cross-holes and install threaded stud, do not tighten.
5. Position bottom brace on hull. Mark holes for drilling. Remove pylon and drill 3/8-inch holes for bottom brace. Be sure to drill just through the fiberglass.
6. Reinstall pylon.
7. In bottom brace install foam gasket between hull and brace, insert the two 1-1/4 x 16 x 3/8 inch bolts, washer and locking nuts.
8. Tighten all fasteners and reinstall seat.
9. Re-tighten all fasteners after first use.
10. Slightly tighten the two nylon anti-rattle setscrews with the 1/8 inch Allen wrench. Handle should move up and down with slight drag.

**Maintenance**

- If using in salt water, be sure to rinse well after use. Push button and remove T-handle from outside housing. Rinse the button area well to prevent the button from sticking. Push button several times making sure that there are no salt particles left on the button prior to reassembly.
- Periodically check that all fasteners are tight, retighten if necessary.

**How To Use**

When sitting backward on the watercraft, reach around the bottom of the SPOT-N-TOW™. With your left hand, using the tip of your index finger, push the button that is in the bottom lock button hole.

Now pull up on the T-handle with your right hand until it locks in the up position.

To lower, use the same process on the top lock button hole. The key is not to put pressure on the T-handle until the button is totally pushed in.

**Limited Warranty**

Dock Edge + Inc. warrants this product to be free of defects in workmanship and material under normal conditions and for which it is intended for one (1) year from the date of purchase. Any defective product must be returned with a Return Goods Authorization #. A copy of the original sales receipt, must accompany all claims. The freight on the defective goods is the responsibility of the consumer.

Visit [www.dockedge.com](http://www.dockedge.com) for further warranty details.